


58126-32 173 - Acute Angle Tee (32 °)

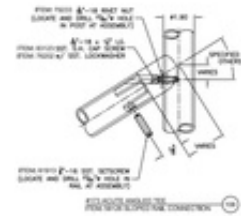

A Rivet Nut tool is required to assemble Interna-Rail fittings

Installation Instructions

- Use on right side of stair going down