


Q-71 Easy Glass Multitool for Aluminum Base Shoe

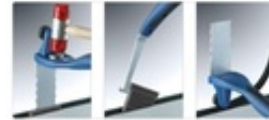

Multiple use tool that allows the installer to

1. Hammer the wedge into place.
2. Remove the wedge.
3. Roll the rubber strip into place.